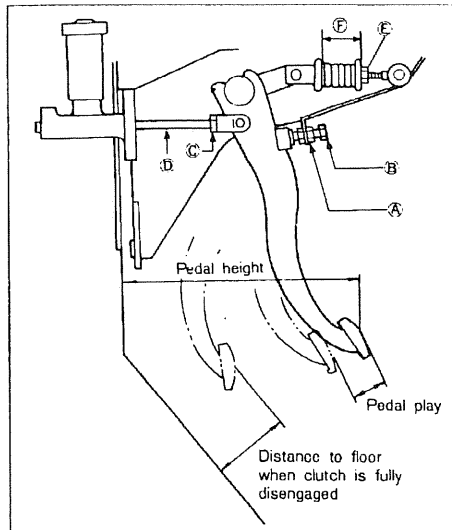


INSPECTION AND ADJUSTMENT

47U06X-001

CLUTCH PEDAL HEIGHT**Inspection**

Measure to check whether the distance from the upper surface of the pedal pad to the dash panel agrees with the standard value.

Standard pedal height: 190 ~ 195 mm (7.5 ~ 7.7 in)

Adjustment

Adjust the pedal height by loosening lock nut A and turning stopper bolt B on the clutch switch.

CLUTCH PEDAL PLAY**Inspection**

Depress the pedal lightly by hand and measure to determine whether the play is within the standard value range.

Standard pedal play: 0.6 ~ 3.1 mm (0.02 ~ 0.12 in) at pedal pad

Adjustment

Adjust the pedal play by loosening lock nut C and turning push rod D.

Caution

After adjusting, tighten lock nut C.

ASSIST SPRING**Inspection**

Measure to check whether the dimension F agrees with the standard value.

Standard spring high: 36.5 ~ 37.5 mm (1.44 ~ 1.48 in)

Adjustment

Adjust the pedal play by turning nut E.