


Removing Auxiliary port Valve


Remove the auxiliary port valve in the numbered order shown in the figure.

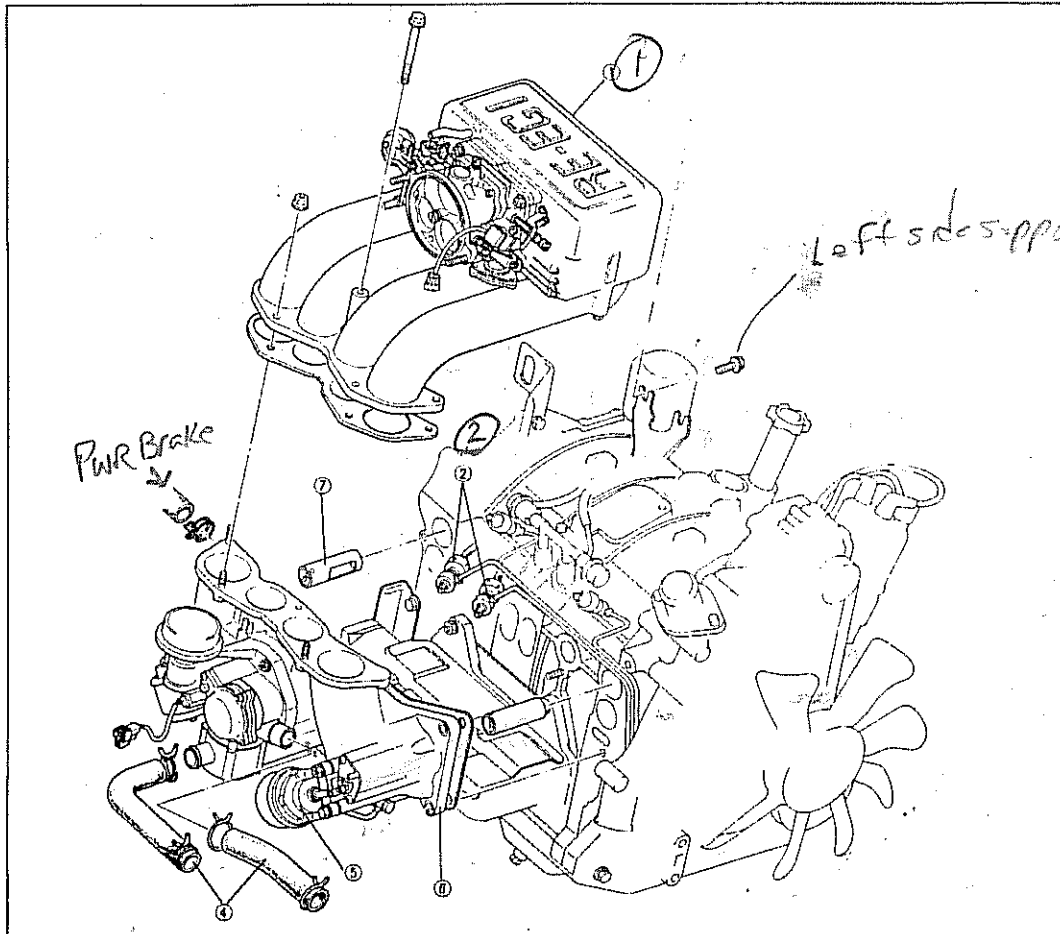

1. Dynamic chamber (see page 4B-49)
2. Check valve assembly
3. Vacuum hoses
4. Air hoses

5. Actuator
6. Intake manifold
7. Auxiliary port Valve

47U04B-087

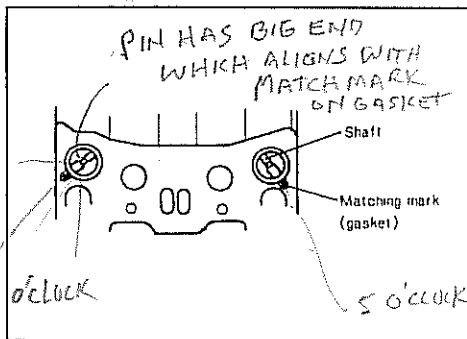

47U04B-088

Checking Auxiliary Port Valve

Check the auxiliary port valve for cracks and leakage.

Installing Auxiliary Port Valve

Install the auxiliary port valve in the reverse order of removing.

Caution

Installation should be made so that the **(bigger side)** of the auxiliary port valve shafts align the matching mark on the gasket as shown in the figure.