


G

IGNITION SYSTEM

IGNITION COIL

Removal / Installation

1. Remove in the order shown in the figure.
2. Install in the reverse order of removal.

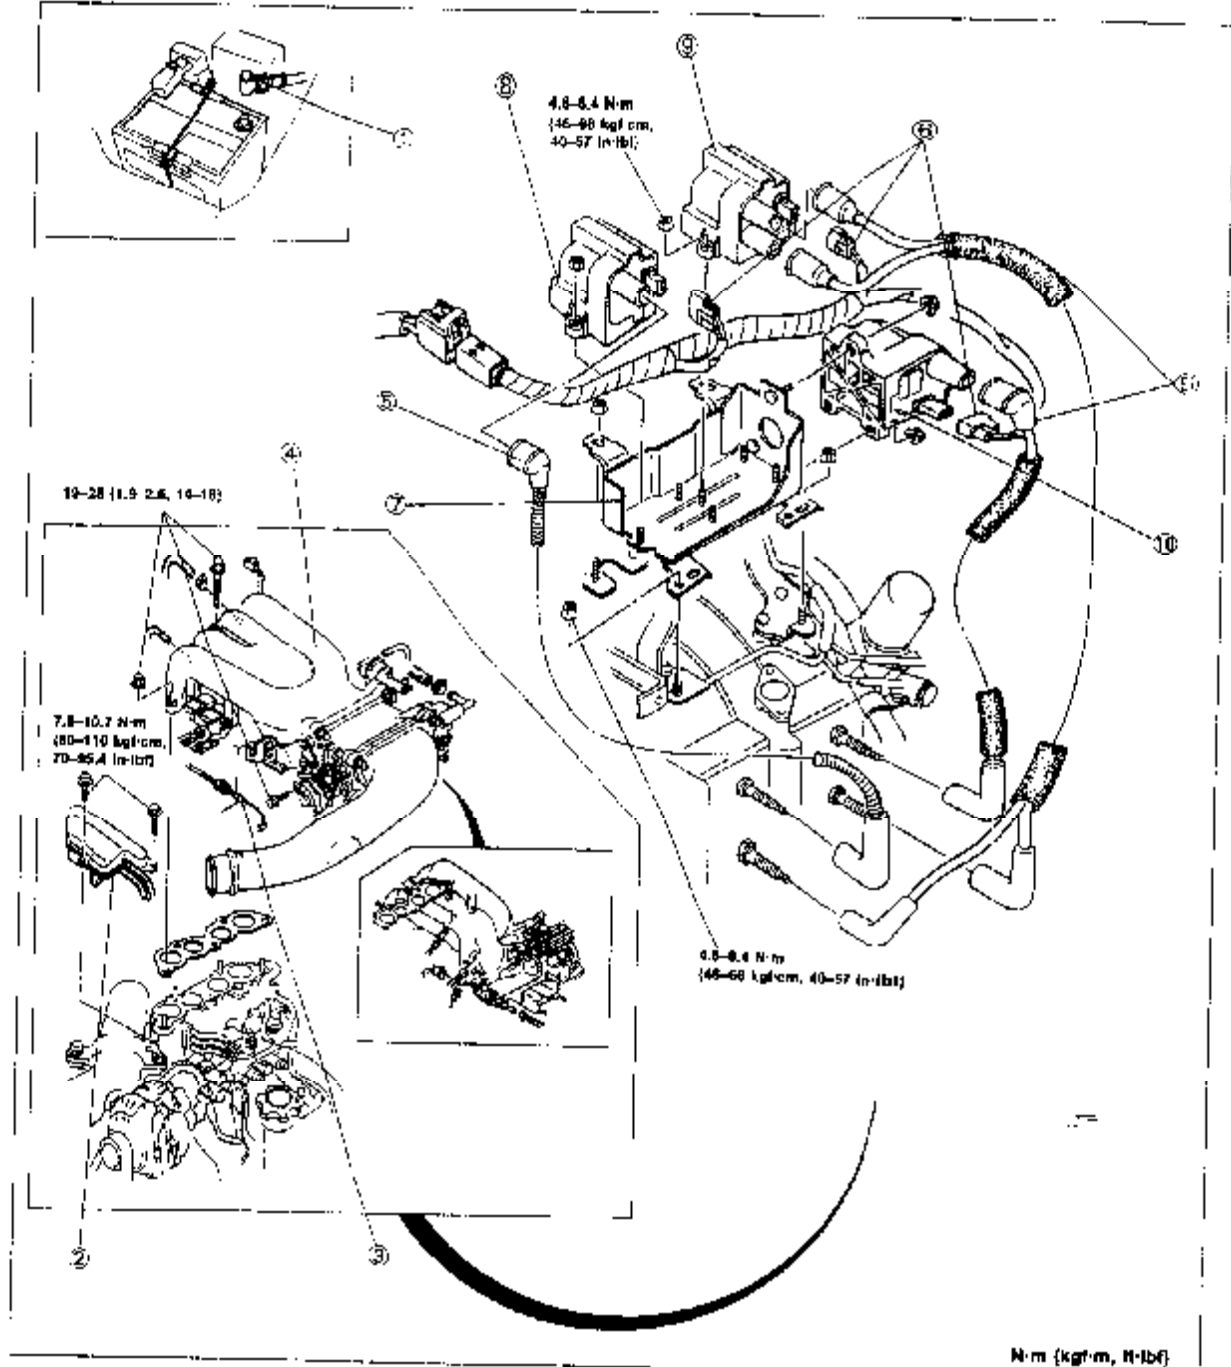

1. Battery negative cable
2. Pressure chamber
3. Accelerator cable
4. Extension manifold

5. High-tension lead
Inspection page G-21
6. Connector
7. Ignition coil bracket
8. Ignition coil (Trailing No.1)
Inspection page G-21

9. Ignition coil (Leading)
Inspection ... page G-21
10. Ignition coil (Trailing No.2)
Inspection page G-21