


| | | |
|------------------------|----------------|--|
| Flowchart No.11 | Symptom | Retractable headlights do not operate with headlight switch, but operate with retractor switch |
|------------------------|----------------|--|


Possible cause

- Damaged retractable headlight relay
- Open or short circuit in wiring harness
- Poor connection of connector

47U0EX-542

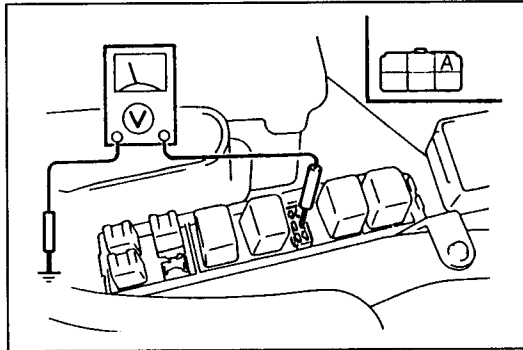

47U0EX-543

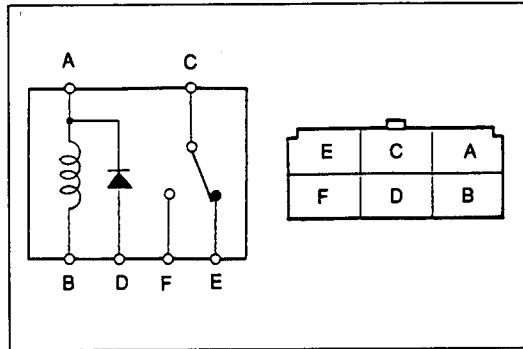

47U0EX-544

Step 1

1. Remove the retractable headlight relay.
2. Turn the headlight switch on.
3. Measure the voltage at terminal A (W/G) of the retractable headlight relay connector (6-pin).

B+: Battery positive voltage

| Voltage | Action |
|---------|---|
| B+ | Go to Step 2 |
| Other | Repair wiring harness (Headlight relay—Retractable headlight relay) |

Step 2

1. Check for continuity between the terminals of the retractable headlight relay.

B+: Battery positive voltage

| Connection | | A | B | C | D | E | F |
|------------|-----|-----|---|-----|---|-----|-----|
| B+ | GND | | | | | | |
| — | — | ○—○ | | ○—○ | | ○—○ | |
| A | B | | | ○—○ | | | ○—○ |

○—○ : Continuity

2. If correct, repair the wiring harness (retractable headlight relay—ground).
3. If not as specified, replace the retractable headlight relay.

| | | |
|------------------------|----------------|--|
| Flowchart No.12 | Symptom | Retractable headlights do not operate with retractor switch, but operate with headlight switch |
|------------------------|----------------|--|

Possible cause

- Damaged retractor switch
- Open or short circuit in wiring harness
- Poor connection of connector

Remedy

- Check the retractor switch. (Refer to section Z4.)

47U0EX-545