

FD3s Power FC																																					
FD ECU #4				FD ECU #3				FD ECU #2				FD ECU #1																									
4Y	4W	4U	4S	4Q	4O	4M	4K	4I	4G	4E	4C	4A	3O	3M	3K	3I	3G	3E	3C	3A	2K	2I	2G	2E	2C	2A	1U	1S	1Q	1O	1M	1K	1I	1G	1E	1C	1A
4Z	4X	4V	4T	4R	4P	4N	4L	4J	4H	4F	4D	4B	3P	3N	3L	3J	3H	3F	3D	3B	2L	2J	2H	2F	2D	2B	1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B

- | | | | |
|--------------------------------------------|------------------------------------------|-------------------------|-----------------------------------------|
| 4A Ground | 3A Steering Pump 12V? | 2A | 1A 12V with 7,5A fuse |
| 4B Ground | 3B Zur EL-Unit | 2B RPM Signal | 1B 12V ignition |
| 4C Ground | 3C O2 sensor | 2C | 1C Starter interlock switch |
| 4D Ground for sensors | 3D Relay Cooling FAN | 2D | 1D Daig-connector |
| 4E Crank-angle (NE) black wire PLUS + | 3E Water-temp sensor | 2E | 1E Thermoswitch |
| 4F Split air Bypass solenoid valve | 3F TPS Signal /green-red | 2F Canada Modell unused | 1F Diag-connector |
| 4G Crank-angle (G) White wire PLUS + | 3G TPS Signal /black-green | 2G | 1G Trailing Front ignitor |
| 4H Crank Angle (G und NE) RedWire MINUS - | 3H Purge control solenoid output | 2H | 1H Leading Ignitor |
| 4I Oil Metering Pump | 3I 5V for TPS and MAP Sensor | 2I Heat Hazard | 1I Diag-connector |
| 4J Oil Metering pump | 3J EGR Switch input | 2J Air pump relay | 1J Traling Rear Ignitor |
| 4K Oil metering Pump Stepping Motor output | 3K Solenoid Valve Relief2 | 2K First-Speed Switch | 1K Relay for fuel pump |
| 4L Oil metering Pump Stepping Motor output | 3L Air-Temp | 2L second-Speed Switch | 1L A/C Relay |
| 4M Solenoid Valve PRC | 3M Knock Sensor | | 1M Speed Signal |
| 4N Solenoid Valve Switch | 3N Solenoid Valve Air Bypass | | 1N Power Steering Switch 12V output |
| 4O EGR Solenoid output | 3O Solenoid Valve double throttle contro | | 1O MAP Sensor Green Yellow output signa |
| 4P AWS Solenoid output | 3P Solenoid Valve Relief1 | | 1P |
| 4Q Solenoid Valve ISC | | | 1Q Clutch-Switch |
| 4R Solenoid valve Turbo Control | | | 1R Neutral- Switch |
| 4S Solenoid Valve Charge Relief | | | 1S Brake pedal switch |
| 4T Solenoid Valve Charge control | | | 1T |
| 4U Solenoid Valve Wastegate Control | | | 1U Fuel temp Sensor |
| 4V Precontrol Solenoid Valve | | | 1V |
| 4W Injector Primary Front | | | |
| 4X Injector Secondary Front | | | |
| 4Y Injector Primary Rear | | | |
| 4Z Injector Secondary Front | | | |