

Note: For safety the injector supply wire should be fused. Check the rating of the factory fuse; it should be at least 15A.

10. Secure all wiring and seal connections to prevent water or dirt from corroding the connections.
11. Plug in your original injectors and start the vehicle. The KID0404 will sense the injector load and automatically switch modes allowing you to verify your wiring before swapping injectors.
12. If the vehicle runs normally, your installation is complete.

Note: Unused channels should be left disconnected with the wires sealed off to prevent damage or corrosion.

Specifications

Power	9~18 volts
Channels	4
Dimensions	4.5 in. x 1.375 in. x 1.125 in.
Weight	11 oz. [includes harness]
Output	ground switch 4A peak 1A hold

The unit is completely sealed and designed to be installed in the engine compartment.

