
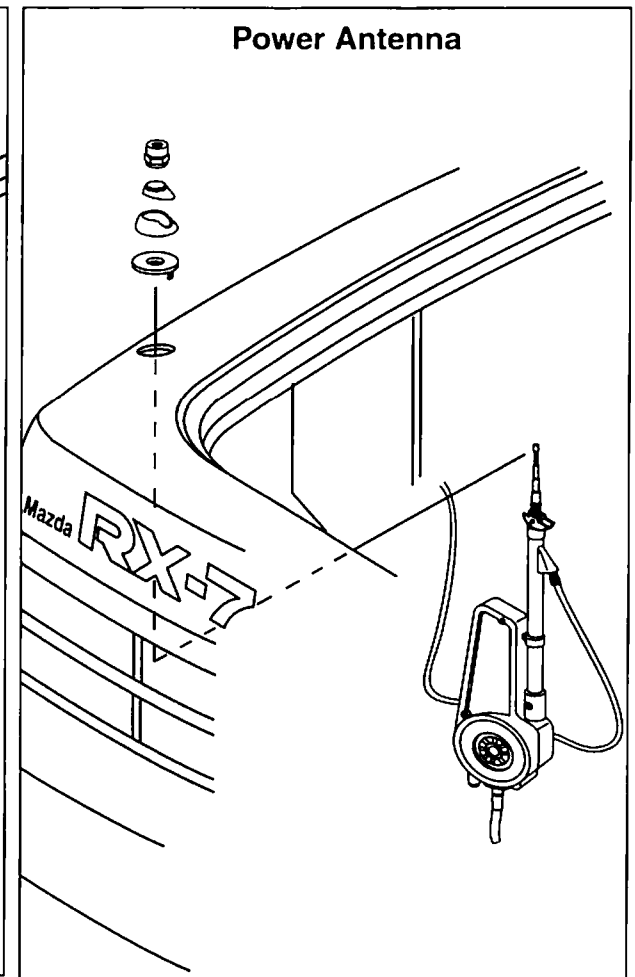


033 0023

Antenna Replacement

1. Pry out push pins from trunk side panel. Fold panel down to access antenna cavity.
2. Loosen and remove antenna retaining nut using needle nose pliers. (Use special care not to slip and damage paint).
3. Remove two (2) 10mm nuts from antenna lower support bracket. Remove and disconnect antenna.
4. Secure replacement antenna as shown and connect antenna cable. If installing power antenna make necessary power connections according to instructions supplied with antenna.
5. Test antenna for proper operation and reassemble trunk panels.

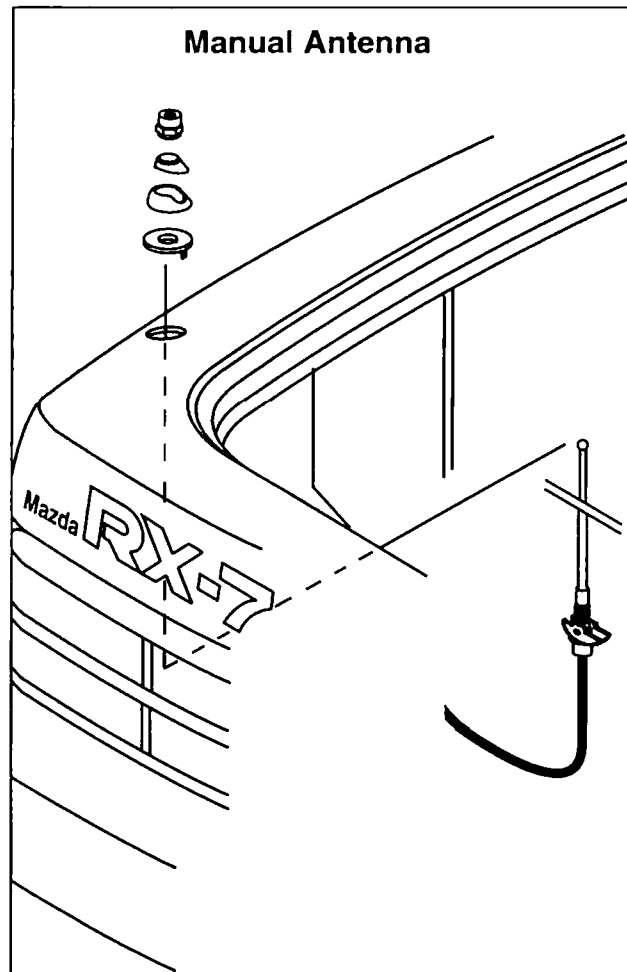

1-800-955-9094
Technical Service

CRUTCHFIELD®
CRUTCHFIELD.COM

Copyright 2006 Crutchfield Corporation

033 0023

Amplifier Bypass

'86-'87 Front Speaker Amplifier—located in speaker enclosure on passenger's side of dash.

1. Remove speaker enclosure following instructions on passenger's side dash speaker replacement.
2. Disconnect connector from speaker enclosure.
3. Cut and connect the following wires:

Light Green with Red stripe	to Blue with Yellow stripe
Light Green with Black stripe	to Blue with Red stripe
Light Green	to Large Terminal (+) of Right Speaker
Light Green with Yellow stripe	to Small Terminal (-) of Right Speaker

'88 Door Woofer Information

Our harness bypasses the factory door woofer amp. The door speakers are woofers, and the factory amp has an internal low-pass crossover. If replacing the factory radio and keeping the factory door woofers, 2 low-pass passive crossovers will be needed. If replacing the factory radio and the factory door woofers with full range speakers, no crossovers will be needed.



1-800-955-9094
Technical Service



Copyright 2006 Crutchfield Corporation

'86-'87 Rear Amplifiers—located at each of the rear speaker locations (not present on all models)

1. Remove two (2) plastic phillips head fasteners and two (2) phillips screws securing grille panel.
2. Remove grille panel and remove three (3) phillips screws securing speaker/amp enclosure to shock tower.
3. Lift enclosure out of cavity and disconnect connector to remove.
4. Remove six (6) phillips screws securing lid on enclosure, disconnect speaker terminals and remove.
5. Cut and connect the following wires:

Red wire from bottom of enclosure	to Red wire that connects to Speaker (+)
Brown wire from bottom of enclosure	to Gray wire that connects to Speaker (-)

6. Reassemble and reinstall enclosure.
7. Repeat procedures for other side.

'89-'92 Door Woofer Information

If the car is equipped with door speakers, they are woofers. They are powered by an amplifier which is located under the driver's side of the dash, if the car does not have passive shoulder belts. The amp is located under the passenger's side of the dash.

To use woofer amp: The inputs of the door woofer amp are wired in parallel with the front speakers. The amp will accept a low or high power speaker level input. In order to use the door woofer amp, the Blue/White wire from the Crutchfield harness will need to be connected to the stereo's amp remote wire.

To bypass woofer amp: Disconnect the amp's two connectors and then plug the two connectors together.